


# 5.9 Deploying and Running the Simulation

The next step is to deploy and run the simulation.

- In the VeriStand Editor, click **Operate >> Deploy**. VeriStand will start compiling and deploying the project to the real-time target. Once the deployment process is complete, the status is updated to **Connected**.
- Double-click the **Workspace** under the Project Files tab to launch the user interface.

 It may take up to 2 minutes to deploy your system due to many factors including host machine specifications, network speed, size of circuit, etc.

