

PDL Module Configuration Panel

The PDL configuration panel has two tabs, one for the rails configuration and the other one for the mode of detection : period and duty, or frequency measurement

