

# OP7000 Receiving and Verification

After opening the package, remove the equipment and components. Locate all the items described in Standard Hardware. Make sure that they are undamaged.

## Standard Hardware

The OP7000 system includes the following basic hardware:

Item	Description	Part Number
OP7000 simulator	Simulator FPGA and PCIe boards and any other optional boards	N/A
System Integration binder	RT-LAB software CD O/S CD (Redhat or QNX) Documentation CD	N/A
PCIe cable	iPASS x4 M-M 38 Pos 2m	T00-0741
BNC cables (4)	BNC to BNC coax cable	
RJ45 cables (4)	61cm (24") RJ45 cables	C-02B-CAT6
Power cable	1.83 m (6') power cord, black (10A 125V)	CPC06



OPAL-RT strongly recommends the use of anti-static wrist straps whenever handling any electronic device provided by OPAL-RT. Damage resulting from electrostatic charges is not covered by the manufacturer's warranty.