

OP5351 DB37F Pin Assignment

P1 Connector				P2 Connector				
DB37	Module pin assignment	DB37	Module pin assignment	DB37	Module pin assignment	DB37	Module pin assignment	
1	+CH00	20	GND_ISO	1	+CH16	20	GND_ISO	
2	+CH01	21	GND_ISO	2	+CH17	21	GND_ISO	
3	+CH02	22	GND_ISO	3	+CH18	22	GND_ISO	
4	+CH03	23	GND_ISO	4	+CH19	23	GND_ISO	
5	+CH04	24	GND_ISO	5	+CH20	24	GND_ISO	
6	+CH05	25	GND_ISO	6	+CH21	25	GND_ISO	
7	+CH06	26	GND_ISO	7	+CH22	26	GND_ISO	
8	+CH07	27	GND_ISO	8	+CH23	27	GND_ISO	
9	+CH08	28	GND_ISO	9	+CH24	28	GND_ISO	
10	+CH09	29	GND_ISO	10	+CH25	29	GND_ISO	
11	+CH10	30	GND_ISO	11	+CH26	30	GND_ISO	
12	+CH11	31	GND_ISO	12	+CH27	31	GND_ISO	
13	+CH12	32	GND_ISO	13	+CH28	32	GND_ISO	
14	+CH13	33	GND_ISO	14	+CH29	33	GND_ISO	
15	+CH14	34	GND_ISO	15	+CH30	34	GND_ISO	
16	+CH15	35	GND_ISO	16	+CH31	35	GND_ISO	
17		36		17		36		
18	GND_ISO	37	GND_ISO	18	GND_ISO	37	GND_ISO	
19				19				