

# OP4610XG Receiving and Verification

## Table of Content

- [Standard Hardware](#)
- [Optional Hardware](#)

After opening the package, remove the equipment and components. Locate all the items described in Standard Hardware. Make sure that they are undamaged.

## Standard Hardware

The OP4610XG real-time simulator includes the following basic hardware:

Item	Description	Part Number
<b>OP4610XG simulator</b>	Full simulator equipped with AMD Ryzen™ 6 cores, 3.8 GHz or equivalent, 16 GB RAM, 256 GB SSD	529-0220
<b>Loopback kit</b>	Loopback board	126-0361
	Loopback cable	113-0737
<b>RJ45 cable</b>	CAT6 (500 MHz) UTP Network Cable - Blue 3 m (10 ft)	T00-0817
<b>Power cable</b>	1.83 m (6 ft) power cord, black (10 A, 125 V)	T00-0833
<b>System Integration binder</b>	Includes system description document and test reports, RT-LAB software, OPAL-RTLinux operating system and documentation CD	N/A

## Optional Hardware

Item	Description	Part Number
<b>MuSE transceiver</b>	Avago AFBR-57R5APZ	T00-0315
<b>MuSE cable</b>	LC-LC multimode 850 nm optical fiber, 2 m (longer cables available)	T00-0797